

## LC-XGC500 / LC-XGC500A IR Command List

Transmission format of LCD projector operation key  
 : NEC Format (single command / command pipelining mode)  
 Transmission format of PC mouse operation button (mouse cursor button) / L / R key  
 : Interlink Mouse Code Format (Includes 3 bit of ID)  
 Format for the transmission of OSD Laser operation button (mouse cursor button)  
 : Interlink OSD Mouse Code Format (Includes 3 bit of ID)  
 Custom Code + Custom Code  
 : 8 patterns as below  
 33h+00h(Default; code1),33h+11h(code2),33h+22h(code3),33h+33h(code4),  
 33h+44h(code5),33h+55h(code6),33h+66h(code7),33h+77h(code8)

Key No.	Data Code (HEX)	Function
1	*1	L-CLICK * Back-side Click Trigger Key
2	11	ON
3	10	OFF
4	38	INPUT1
5	39	INPUT2
6	06	INPUT3
7	89	AUTO PC
8	43	FREEZE
9	16	INFO
10	8C	CURSOR UP
11	1E	CURSOR LEFT/VOLUME-
12	1D	CURSOR RIGHT/VOLUME+
13	8D	CURSOR DOWN
14	1C	MENU
15	0F	SELECT
16	*1	R-CLICK
17	8A	P-TIMER (Number 1)
18	88	D.ZOOM (Number 2)
19	82	SCREEN (Number 3)
20	47	ZOOM + (Number 4)
21	4A	FOCUS + (Number 5)
22	40	LENS SHIFT (Number 6)
23	46	ZOOM - (Number 7)
24	4B	FOCUS - (Number 8)
25	5B	KEystone (Number 9)
26	84/85 *2	LASER
27	0B	MUTE (Number 0)
28	8B	SHUTTER
OB1	*1	Mouse Cursor button

\*1... Transmit code for Mouse \*2... Transmit code to set Laser Pointer / OSD Laser to ON/OFF