

# ClickShare Software Update



## Why ?

In order to benefit from all latest ClickShare features, a regular software update is recommended.

## Where to find on the website ?

You can find the "Download software" button on [www.barco.com/clickshare](http://www.barco.com/clickshare)

## Important notice for updating to CSC-1 software

Please note that CSC-1 software versions 01.04 and above are digitally signed to raise security level. To change from an unsigned software version to signed software, an intermediate step is required. This step is included in CSC-1 software version 01.04. As a result, updating CSC-1 software version 01.03 to CSC-1 software version 01.05 or higher requires first an update from version 01.03 to 01.04, followed by an update from 01.04 to 01.05 or higher. When updating software version 01.04 to higher versions, no special action is required. Downgrading a software version to an older version does not require an intermediate step.


After installing CSC-1 software version 01.07 or above, it is not possible anymore to downgrade to a version prior to 01.07 in line with requirements imposed by EU directive 1999/5/EC for R&TE (commonly known as the CE mark).

## STEP 1 : UPDATE THE BASE UNIT

There are 2 ways to update the Base Unit : via USB stick or via Wi-Fi


### Option 1 : via USB stick

- 1 Download new software from [www.barco.com/clickshare](http://www.barco.com/clickshare) and extract the zip file
- 2 Rename the ipk or nad file to clickshare\_firmware.ipk or clickshare\_firmware.nad and copy it onto the USB stick
- 3 Plug the USB stick into the front USB port of the Base unit
- 4 Verifying Update Package...
- 5 Installing Update Package...
- 6 After software update has completed, the Base Unit will shut down (CSC) or reboot (CSM)
- 7 To restart press the standby button at the front of the Base Unit

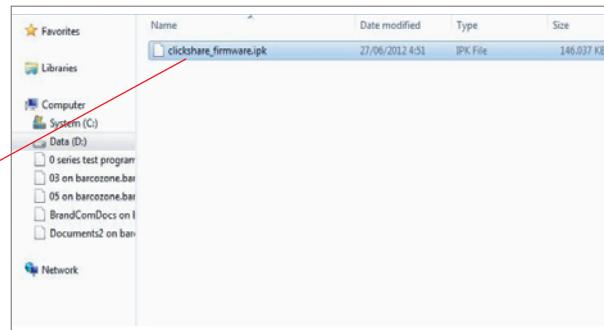

### Option 2 : via Wi-Fi

- 1 Download new software from [www.barco.com/clickshare](http://www.barco.com/clickshare) and extract the zip file onto your local computer
- 2 Connect to the Wi-Fi of the Base Unit. The default SSID for the ClickShare unit is "clickshare-serialnumber"
- 3 The default security key is "clickshare"
- 4 Browse to the wireless IP address of the Base Unit : 192.168.2.1  
Enter the user name "admin" and the password "admin"
- 5 Go to "Maintenance", then "Software" to upload the new software which you have saved on your desktop
- 6 The upload is in progress and the Base Unit is verifying the Update Package
- 7 Installing Update Package ...
- 8 After software update has completed, the Base Unit will automatically reboot

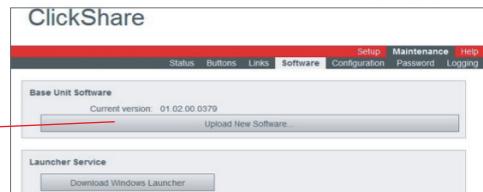

## STEP 2 : UPDATE THE BUTTONS

After the reboot of the Base Unit, you will need to update the Buttons by pairing them one by one. This is important for enabling new features and having the Button and Base Unit work together correctly. The Button will blink white when updating software. When the Button stops blinking and is solid red the update has completed.

