


InVision Access™ equipment rack

37123

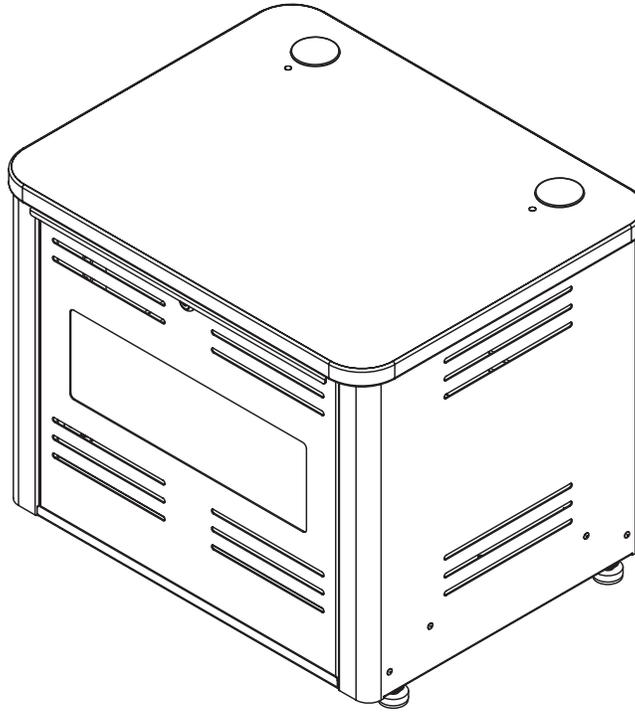

⚠ Important ⚠

Before using this product:

- Read this manual
- Comply with all safety and operating instructions
- Ensure all parts and correct quantities are included

Any parts damaged during shipment must be reported within 15 days of receipt. To report information regarding missing parts or damage, to purchase parts or accessories, or if you have any questions, please contact us.

Thank you for purchasing Spectrum products!

Spectrum Industries, Inc
925 First Avenue, Chippewa Falls, WI 54729 USA
800 235 1262
715 723 6750
www.spectrumfurniture.com

Touchboards

205 Westwood Ave, Long Branch, NJ 07740
Phone: 866-94 BOARDS (26273) / (732)-222-1511
Fax: (732)-222-7088 | E-mail: sales@touchboards.com

⚠ Important Safety and Care Instructions ⚠

- Read this owner's manual before assembly or operation.
- Do not allow children to operate.
- For indoor use only. Do not install or store where it will be exposed to moisture.
- Do not block the ventilation openings.
- Do not allow anyone to sit, stand, or climb on the unit.
- Use a damp, soft-cloth, or sponge, with mild soap or detergent solution to clean dirty surfaces. **Do not use harsh solvents or abrasives.**
- This unit is intended for institutional use. It does not have any user-serviceable parts or user-maintenance requirements. If servicing is necessary, please contact Spectrum Industries for assistance.


⚠ Warning - Relocating audio and/or video equipment to furniture not specifically designed to support audio and/or video equipment may result in death or serious injury due to the furnishing collapsing or over turning onto a child.

⚠ Warning - Death or serious injury may occur when children climb on audio and/or video equipment furniture. A remote control or toys placed on the furnishing may encourage a child to climb on the furnishing and as a result the furnishing may tip over on to the child.


Electrical Safety:

- Keep the power switches in the OFF position before plugging or unplugging from the wall outlet.
- Turn OFF the devices before plugging them in.
- Ensure total device / equipment load does not exceed 12-amps.
- Do not plug the power cord into an extension cord.
- Inspect the power cords for damage before each use. Do not use power cords that are damaged.
- Unplug power cord from electrical outlet by gripping the cord. Do not unplug the power cord by pulling only on the cord.
- Do not step on, drive over, drag, or place objects on the power cord.
- For added safety, plug the cart into a grounded outlet controlled by a GFI (Ground Fault Interrupter) circuit breaker.
- Damaged electrical components can create significant hazards to users and is not covered by the warranty. Repairs should always be performed by a qualified electrician.
- Electrical devices are not toys. Children are often unaware of the hazards associated with electrical devices. This unit must always be used by adults or with adult supervision.

Hardware Contents

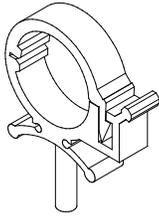

(4) 0114322
1" pine tree clips

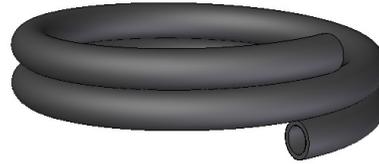

(2) 0116580
3/4" ID, 1" OD
wire loom (64")

Assembly / Setup

Casters / Glides

- For mobile use, thread the glides all the way in. **Figure 1.**

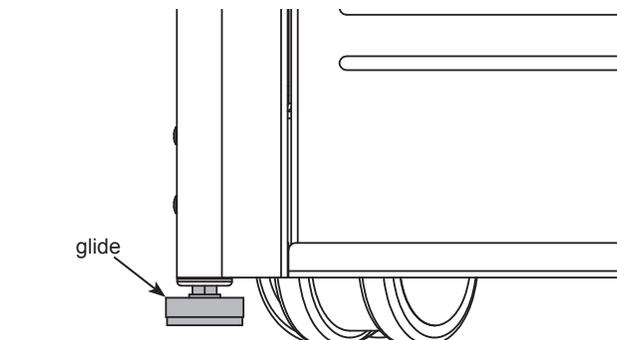


Figure 1

- For stationary use, unscrew the glides until the casters no longer touch the floor. **Figure 2.** Make sure all 4 glides are unscrewed the same length.

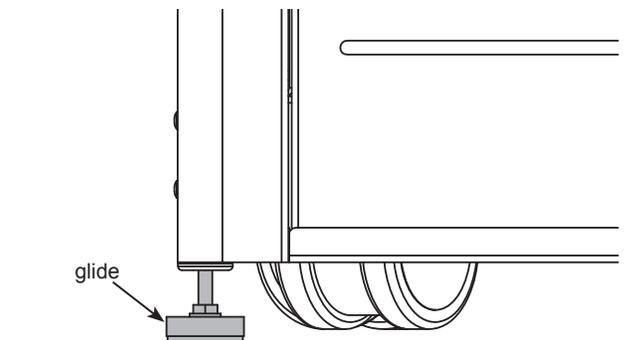


Figure 2

Install rack equipment

1. Remove front and rear panels.
2. The equipment rack provides 8RU. Rack-mount accessories with a depth greater than 14.331"D will not fit in the rack. Check the dimensions of all equipment before installation. **Figure 3.**

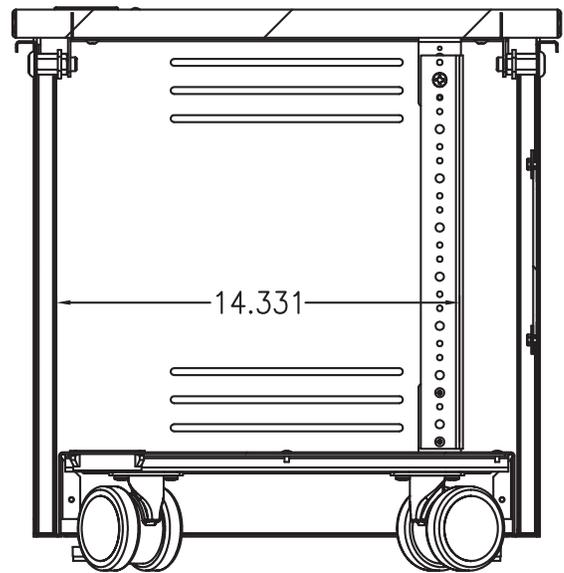


Figure 3

Locate equipment rack

- **Figure 4-5** shows suggested positions of the equipment rack when used with an InVision Access collaboration table.

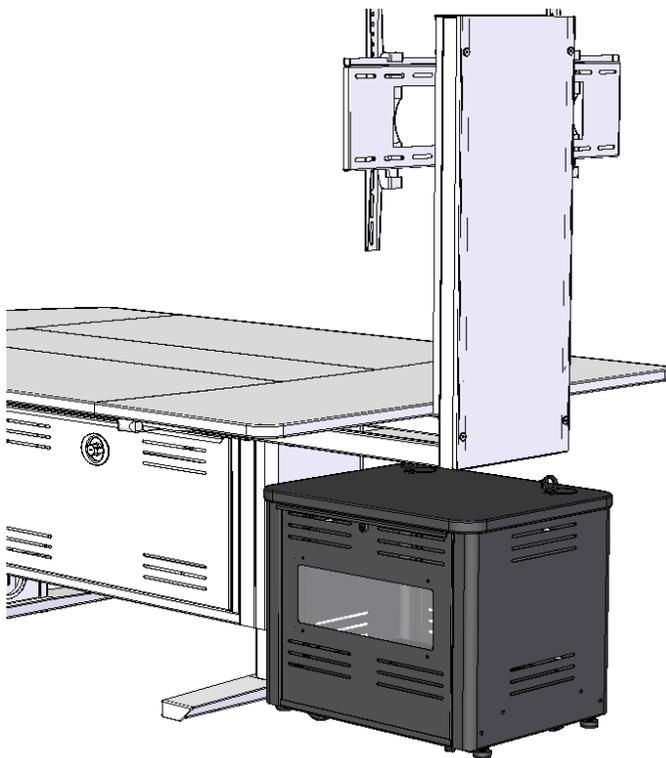


Figure 4

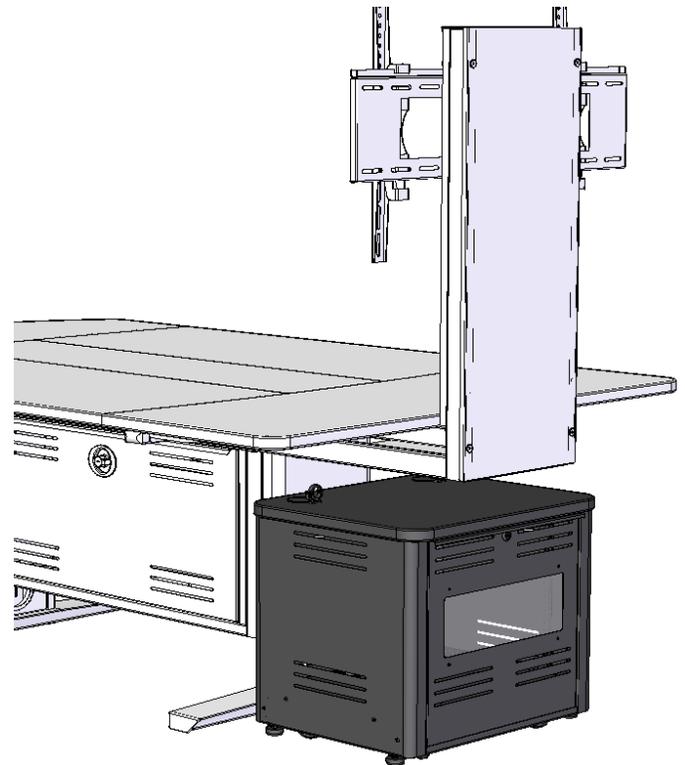


Figure 5



CAUTION



If using the rack with the e-Lift (electric) legs, be sure there is sufficient clearance between the equipment rack and the moving leg to ensure collision does not occur.

Cord management

1. The equipment rack includes 2 worksurface grommets and 2 wire looms. The looms can be used to route cords and wires to the Access table or display stand.
2. On the top of the worksurface, remove the two small hole plugs and insert (2) pine tree clips. **Figure 6.**
3. Insert (2) pine tree clips to the underside of the display stand tray.
4. After wiring is complete, secure the looms with the 4 pine tree clips.

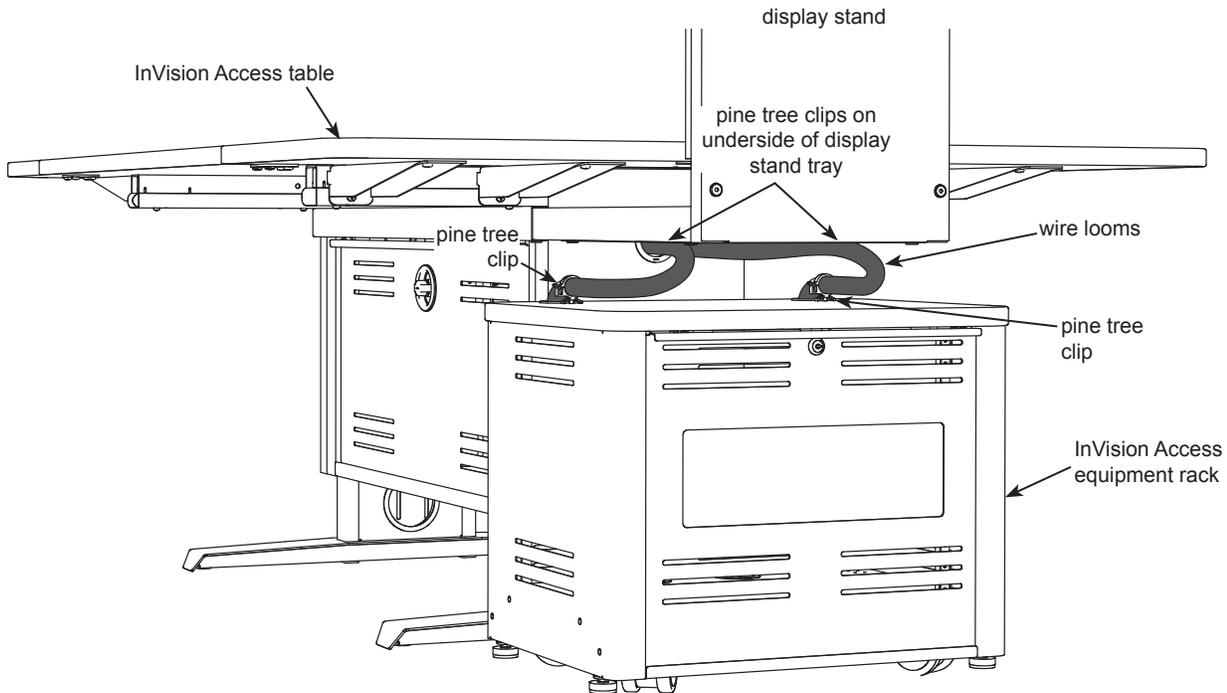


Figure 6

Door stop adjustment

If necessary, the offset stops can be rotated slightly to adjust the closed position of the panels.

1. To rotate, loosen the JC bolt slightly with a 4mm hex wrench. **Figure 7.**
2. Rotate the stop until the panel is positioned correctly.
3. Re-tighten the JC bolt securely.


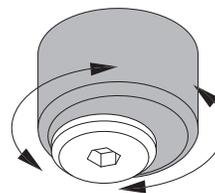


Figure 7

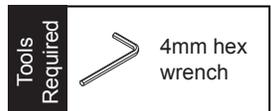


Moving and parking


- Before moving, unplug and secure all power cords.
- Close and lock door panels.
- Remove any items from the top of the worksurface.
- Push slowly and carefully. Do not move over uneven or irregular surfaces.
- Do not allow children to move.
- Do not park unit in areas of heavy traffic.
- Do not run power cords across hallways, classrooms, or other areas where they will be walked on.
- Do not leave unit unattended in areas where children have access.
- Keep door panels locked whenever the unit is unattended or parked.

Options


Note: Rack-mount accessories with a depth greater than 14.331"D will not fit in the Access equipment rack. Check the dimensions of all equipment before installation. The following are compatible Spectrum rack-mount options.

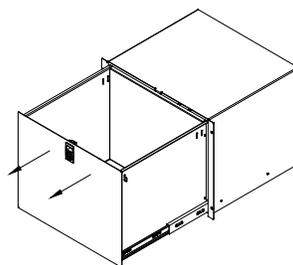


Locking File Drawer (8RU)
w/ file holder
interior dims:
15 $\frac{3}{4}$ "W x 13 $\frac{3}{16}$ "D x 13 $\frac{3}{16}$ "H
(50 lbs max load)
97515

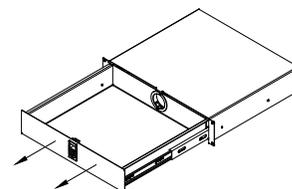


Locking Drawer (2RU)
interior dims:
15 $\frac{3}{4}$ "W x 13 $\frac{1}{16}$ "D x 2 $\frac{7}{8}$ "H
(25 lbs max load)
97514

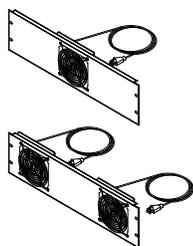


Cooling Fans (3RU)
19"W x 2"D x 5 $\frac{1}{4}$ "H
Single Fan-97507
Double Fan-97506

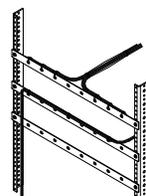


Wire Lace Kit
3 lace straps included
95517

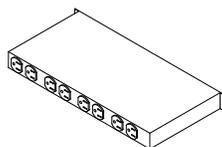

9-Outlet Power Strip (1RU)
19"W x 9"D x 1 $\frac{3}{4}$ "H
99021



Flexible Halogen Light (1RU)
19"W x 2"D x 1 $\frac{3}{4}$ "H
99033

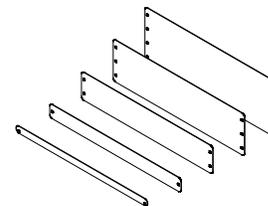

Rack-Mount Blanks
(fills rack spaces where components are not needed)
97516 - (1/2 RU)
97510 - (1RU)
97511 - (2RU)
97512 - (3RU)
97513 - (4RU)

Warranty Statement

WE WILL MAKE IT RIGHT FOR YOU!

Spectrum is committed to provide complete customer satisfaction. Each of our products is manufactured from the best materials available and each product is stringently monitored throughout the production process through our P.A.C.E. program (Product Assurance to meet Customer Expectations).

We expressly warrant that Spectrum products will be of good quality and workmanship and free from defect for the period set out in the warranty table below from the date of delivery. This warranty shall not apply to defects or damage resulting from misuse, abuse, neglect, improper care, modification or repair not authorized by Spectrum, or any other cause outside the control of Spectrum. Spectrum will, at its sole option, either repair or replace the defective product.

This warranty is exclusive; no other warranty, written or oral, is expressed or implied. This warranty is given by Spectrum to Buyer and to no other person or legal entity. No Spectrum dealer, distributor, agent or employee is authorized to make any modification or addition to this warranty.

NOTWITHSTANDING ANYTHING TO THE CONTRARY, SPECTRUM WILL NOT UNDER ANY CIRCUMSTANCES BE LIABLE FOR INDIRECT OR LIQUIDATED DAMAGES, INCLUDING CONSEQUENTIAL, INCIDENTAL AND SPECIAL DAMAGES. IN NO EVENT SHALL SPECTRUM'S LIABILITY, WHETHER UNDER CONTRACT OR WARRANTY, IN TORT OR OTHERWISE, EXCEED THE PURCHASE PRICE RECEIVED BY SPECTRUM FOR THE PRODUCT AT ISSUE AND "RECALL ACTION" EXPENSES. SPECTRUM SHALL NOT BE SUBJECT TO ANY OTHER OBLIGATIONS OR LIABILITIES, WHETHER ARISING OUT OF BREACH OF CONTRACT, WARRANTY, TORT (INCLUDING NEGLIGENCE AND STRICT LIABILITY) OR OTHER THEORIES OF LAW, WITH RESPECT TO PRODUCTS SOLD OR SERVICES RENDERED BY SPECTRUM, OR ANY UNDERTAKINGS, ACTS OR OMISSIONS RELATING THERETO.

Our Customer Service Department is ready to provide immediate attention to any questions, comments or concerns. They are available to answer your calls Monday through Friday from 7 am to 5 pm CST. In addition your product comments or concerns are welcome via e-mail at: spectrum@spectrumfurniture.com.

Warranty Table

Item	Warranty Period
<ul style="list-style-type: none"> • Adjustable Crank/Electric Desk Legs • Flat Panel Desk Gas Cylinders 	<ul style="list-style-type: none"> • 1 Year
<ul style="list-style-type: none"> • Adjustable Height Chair Parts – including frames, gas cylinders, wood and plastic parts, and control handles Adjustable Height Chair Parts Casters • Adjustable Height Chair Upholstery • In-Stock Upholstery • Graded-In Fabrics and Customer Owned Material 	<ul style="list-style-type: none"> • 7 Years • 2 Years • 2 Years • No Warranty
<ul style="list-style-type: none"> • Height Adjustable Columns and Lifts • General Use Casters • Electrical • Keyboard/Mouse Trays 	<ul style="list-style-type: none"> • 1 Year
<ul style="list-style-type: none"> • Flat Panel Monitor Arm – General Parts • Flat Panel Monitor Arm – Gas Cylinders 	<ul style="list-style-type: none"> • 5 Years • 2 Years
<ul style="list-style-type: none"> • Computer Desk Chassis • Cart Chassis • Lectern Chassis 	<ul style="list-style-type: none"> • 10 Years



205 Westwood Ave, Long Branch, NJ 07740
Phone: 866-94 BOARDS (26273) / (732)-222-1511
Fax: (732)-222-7088 | E-mail: sales@touchboards.com

