LMVP

Portrait Mode Video Wall Flat-Panel Framing System

INSTALLATION INSTRUCTIONS



9541-000-011-0X Rev.1

Weight Limit	
Warning Statements	
Installation Tools	
Parts List	
Features	
Installing the Mount	
Introduction	
Installing Optional Model Specific Spacers	
Installing the Mounting Brackets	
Selecting the Mounting Hardware	
Universal Washer Installation	
Universal Spacer Installation	
Attaching the Mounting Brackets to the Flat-Panel	
Mounting the Flat-Panel	
Attaching the Flat-Panel to the Mount 11	
Locking Safety Screw Installation12	
Post-Installation Adjustments	
Maintenance and Servicing	
Technical Specifications	
Warranty	

Weight Limit

Maximum Flat-panel Weight: 160 Ib.

THE WALL STRUCTURE MUST BE CAPABLE OF SUPPORTING AT LEAST FIVE TIMES THE WEIGHT OF THE FLAT-PANEL. IF NOT, THE WALL STRUCTURE MUST BE REINFORCED.


Warning Statements

PRIOR TO THE INSTALLATION OF THIS PRODUCT, THE INSTALLATION INSTRUCTIONS MUST BE READ AND COMPLETELY UNDERSTOOD. KEEP THESE INSTALLATION INSTRUCTIONS IN AN EASILY ACCESSIBLE LOCATION FOR FUTURE REFERENCE.
PROPER INSTALLATION PROCEDURE BY A QUALIFIED SERVICE TECHNICIAN MUST BE FOLLOWED, AS OUTLINED IN THESE INSTALLATION INSTRUCTIONS. FAILURE TO DO SO COULD RESULT IN PROPERTY DAMAGE, SERIOUS PERSONAL INJURY, OR EVEN DEATH.
SAFETY MEASURES MUST BE PRACTICED AT ALL TIMES DURING THE ASSEMBLY OF THIS PRODUCT. USE PROPER SAFETY EQUIPMENT AND TOOLS FOR THE ASSEMBLY PROCEDURE TO PREVENT PERSONAL INJURY.
PREMIER MOUNTS DOES NOT WARRANT AGAINST DAMAGE CAUSED BY THE USE OF ANY PREMIER MOUNTS PRODUCT FOR PURPOSES OTHER THAN THOSE FOR WHICH IT WAS DESIGNED OR DAMAGE CAUSED BY UNAUTHORIZED ATTACHMENTS OR MODIFICATIONS, AND IS NOT RESPONSIBLE FOR ANY DAMAGES, CLAIMS, DEMANDS, SUITS, ACTIONS OR CAUSES OF ACTION OF WHATEVER KIND RESULTING FROM, ARISING OUT OF OR IN ANY MANNER RELATING TO ANY SUCH USE, ATTACHMENTS OR MODIFICATIONS.
At least two qualified people should perform the assembly procedure. Personal injury and/or property damage can result from dropping or mishandling the flat-panel.
If mounting to wall studs or ceiling studs, make sure that the mounting screws are anchored into the center of the wall studs or ceiling studs. Use of an edge-to-edge stud finder is recommended.
It is recommended that a maximum of % plaster board be used when mounting to wooden studs.
Be aware of the mounting environment. If drilling and/or cutting into the mounting surface, always make sure that there are no electrical wires in wall. Cutting or drilling into an electrical line may cause serious personal injury.
Make sure there are no water or natural gas lines inside the wall where the mount is to be located. Cutting or drilling into a water or gas line may cause severe property damage or personal injury.
This product is intended for indoor use only. Use of this product outdoors could lead to product failure and/or serious personal injury.
Do not install near sources of high heat. Do not install on a structure that is prone to vibration, movement or chance of impact.
Contact Premier Mounts with any questions: (800) 368-9700 mounts@mounts.com
mounts@mounts.com




Installation Tools

The following tools may be required depending on your installation.

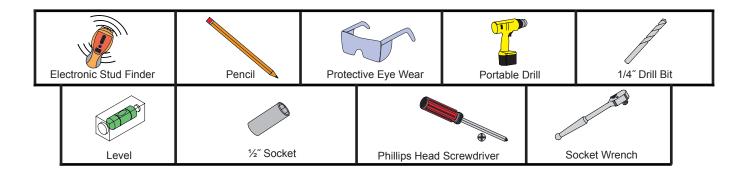

Parts List

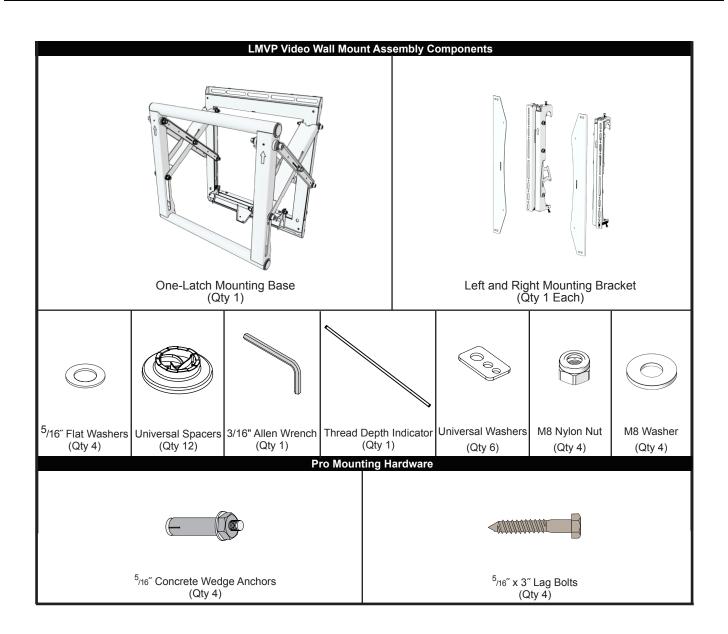




LMVF	2
------	---


	Mountin	ng Hardware	
M4 x 12mm Screw (Qty 6)	E mar E	M6 x 12mm Screw (Qty 6)	
M4 x 16mm Screw (Qty 6)	E mand E manda E mand E manda E mand E manda E manda	M6 x 16mm Screw (Qty 6)	
M4 x 25mm Screw (Qty 6)		M6 x 25mm Screw (Qty 6)	
M5 x 12mm Screw (Qty 6)	E Company E Company	M8 x 12mm Screw (Qty 6)	
M5 x 16mm Screw (Qty 6)	E Junna E Junna E Junna E Junna E Junna E Junna	M8 x 16mm Screw (Qty 6)	E Jamma E Jamma E Jamma E Jamma E Jamma E Jamma
M5 x 25mm Screw (Qty 6)	K) JALANAN K) JALANAN K) JALANAN K) JALANAN K) JALANAN K) JALANAN K) JALANAN K) JALANAN	M8 x 25mm Screw (Qty 6)	E LINING E LINING E LINING E LINING E LINING E LINING E LINING E LINING






The LMVP Portrait Mode Video Wall Flat-Panel Framing System is a customizable video wall mounting system featuring multi-monitor stacking, open design, custom spacers and scissor mount extension. It has an extending scissor mount for easy installation, cable management and servicing. Spacers are custom designed for specific flat-panels.

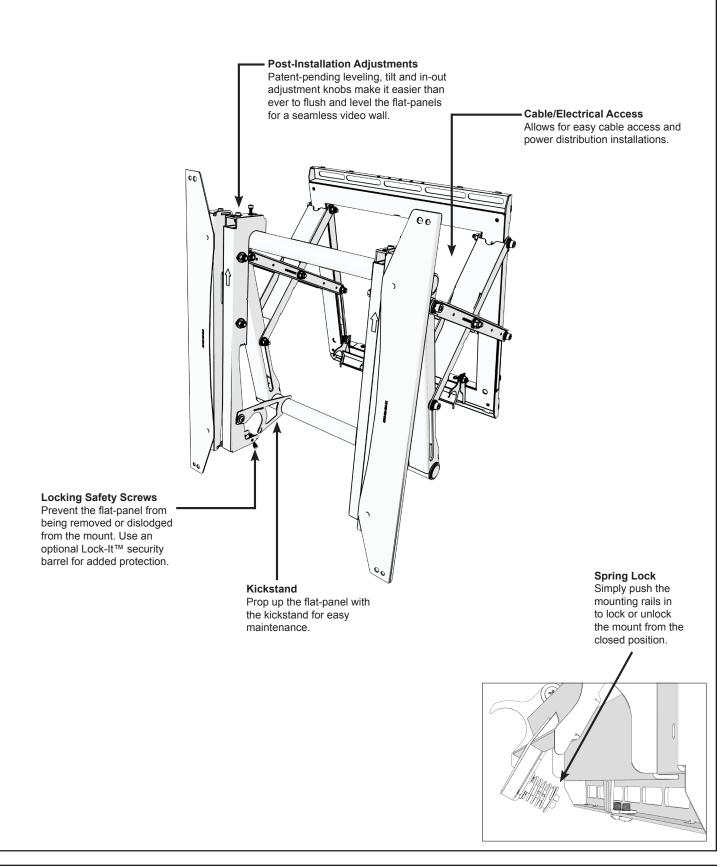


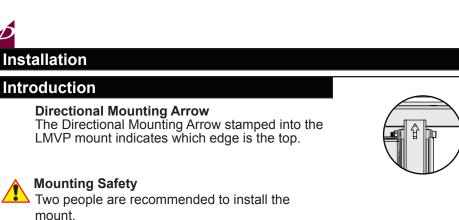

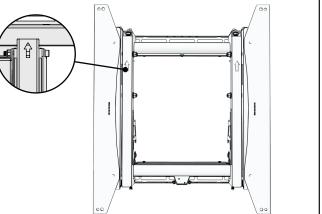

Step 1

- You must secure the mount to two (2) wall studs with four (4) lag bolts (2 lag bolts for each stud found).
- 1) Use a stud finder to determine the exact center of wall studs in the vicinity of the mount.
- 2) Use a pencil to mark the exact center of each of the wall studs.

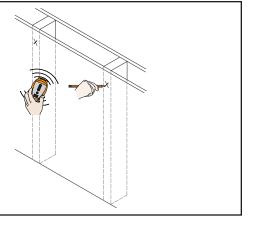

Step 2


Two people are recommended for this step; one person to level the mount and another person to mark the wall stud location.


- 1) Place the mount against the wall in the desired viewing location.
- 2) Adjust the mount to align the mount slots in the mount with the center of the wall studs.
- 3) Level the mount.
- 4) Use a pencil to mark the upper right mounting location along the center of the wall stud.

Step 3

Drill a "pilot hole" in the center of the upper right mark using a ¼" drill bit and power drill.

(Only use a ¼" drill bit when drilling pilot holes.)

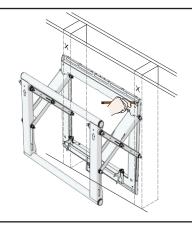

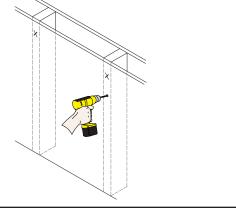

LMVP

LMVP

Step 4

- 1) Place the mount against the wall and align it with the pilot hole.
- Insert one (1) ⁵/₁₆" x 3" lag bolt and one (1) ⁵/₁₆" washer into the upper right pilot hole.
- 3) Use a socket wrench and a $\frac{1}{2}$ socket to tighten the lag bolt.

Do not overtighten the lag bolt.

Step 5

- 1) Level the mount.
- Use a pencil to mark the remaining four (4) mounting locations along the center of each wall stud.






Drill a "pilot hole" in the center of each of the marks with a power drill and a $1\!\!\!\!/ 4''$ drill bit.



Only use $\frac{1}{4}$ " drill bit when drilling the pilot holes.

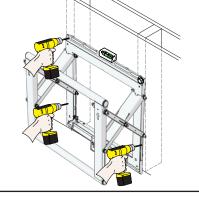

Step 7


- Insert one (1) ⁵/₁₆" x 3" lag bolt and one (1) ⁵/₁₆" washer into each pilot hole
- Tighten all lag bolts using a socket wrench and ¹/₂" socket.




Do not overtighten the lag bolts when attaching the mount to the wall. Improper installation may result in personal injury or property damage.

If you are using OPTIONAL model specific spacers, proceed to the "Installing Optional Model Specific Spacers" on page 8.

If not, proceed to "Installing the Mounting Bracket" on page 9.

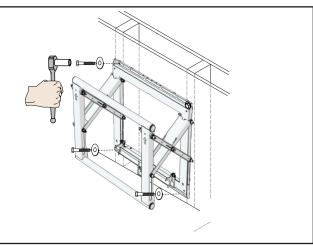


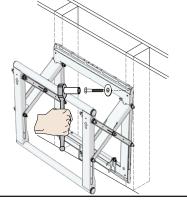

Installing OPTIONAL Model Specific Spacers

LMVP's dedicated flat-panel spacers are engineered with the knowledge that aligning each flat-panel on a large wall is time consuming and costly. <u>These model-specific spacers</u> are available for most flat-panels, which significantly reduces the installation time. (Call Customer Service to inquire about model specific spacers.)




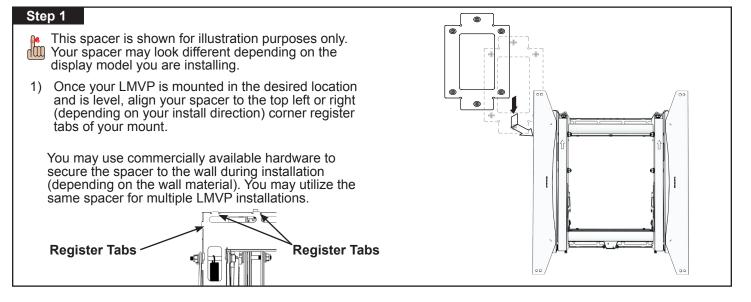

Step 2

Multiple LMVP mounts can be installed using model specific spacers. Simply repeat step one when installing each of the surrounding LMVP mounts. Use one spacer for each 2x2 installation by mounting it to the wall, or utilize the same spacer as many times needed to complete an unlimited LMVP large matrix video wall.

- 1. Make sure the spacer is plumb and level and mark each corner where the LMVP will be mounted (or secure to the wall). It is best to start from the bottom corner and work your way up.
- 2. Install the second mount working in a horizontal direction.
- 3. Ensure that the mount remains plumb and level.
- 4. Repeat this step for each mount horizontally
- 5. To install multiple rows, place spacer between previously installed LMVPs on the bottom row. Make sure the spacer is plumb and level, mark the corners (or secure to the wall) to be sure of where the LMVP should be and secure your mount to the wall.

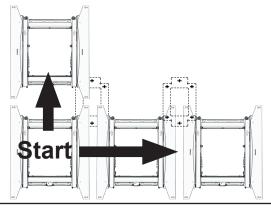

Installing the Mounting Brackets

Selecting the Mounting Hardware


- 1) Insert a small straw or toothpick into the threaded inserts found on the back of the flat-panel.
- 2) Use a pencil to mark the depth of the threaded insert on the small straw or toothpick.
- 3) Mark the straw or toothpick 1/8" above the depth of the threaded insert, as shown in Figure 1.
- 4) Insert the small straw or toothpick into the remaining threaded inserts to compare and verify their depth using the straw or toothpick's 1/8" allowance mark.
- 5) Locate the correct diameter screw for the threaded insert.


If the screw you selected is longer than the 1/8" allowance mark on the small straw or toothpick, as shown in Figure 2 and Figure 3, do not use this screw. The screw length must not bypass the mark.

6) Test each size of the screws provided.

The correct screws should thread easily into the mounting point and not pull out when tension is applied.


Go to "Universal Washer Installation" on page 10

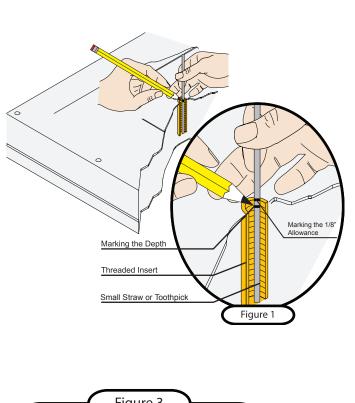

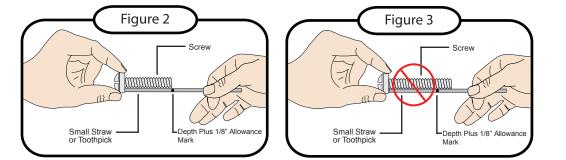

Securing the Adapters

Optional adapters are available with your LMVP mount. Secure the adapters to the LMVP brackets with the supplied M8 washers and nuts.

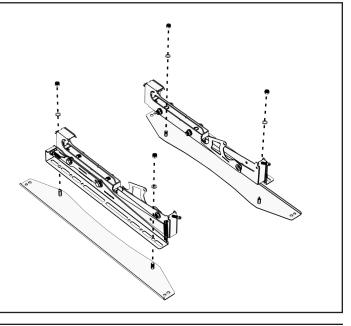

Installing the Mounting Bracket (cont'd)

Universal Washer Installation

Premier Mounts' Universal Washers are designed to accommodate the various M4, M5, M6 and M8 hole sizes required by flat-panels.



Do not place excessive pressure on the back of the flat-panel, as this may damage your flat-panel.



The Universal Washer must be installed between the head of the mounting screw and the mounting bracket as shown.



Does your flat-panel have:


- Recessed mount points?
- Uneven mount points?
- A curved back?
- Any obstruction near the mount point?

If **Yes**, you must install Universal Spacers. Remove the mounting brackets, Universal Washers, and mounting screws from the back of the flat-panel. **Proceed to the "Universal Spacer Installation" section.**

If No, skip to the "Attaching the Mounting Bracket to the Flat-Panel" section.


Universal Spacer Installation

Premier Mounts' Universal Spacers allow you to attach the mounting bracket to flat-panels which have recessed or uneven mount points. Each Universal Spacer adds 1/4" to the distance between the mounting bracket and your flat-panel.




The Universal Spacers must only be installed between the mounting bracket and your flat-panel.


Proceed to the "Attaching the Mounting Bracket to the Flat-Panel" section.



The Universal Spacers

Fit M4, M5, M6 and M8 screw sizes.

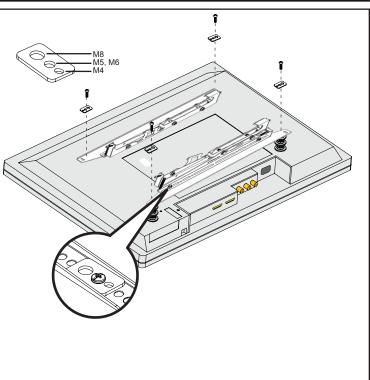

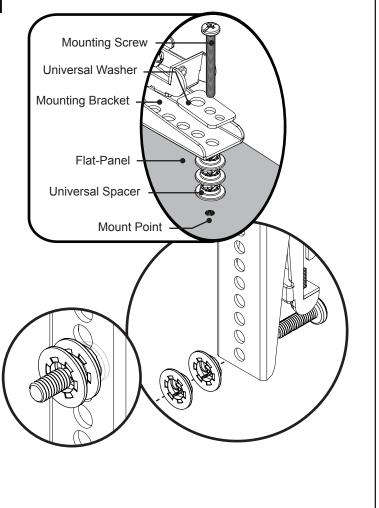

Installing the Mounting Brackets (cont'd)

Attaching the Mounting Brackets to the Flat-Panel


This section presumes that you have read and understood the **"Selecting the Proper Mounting Hardware"** section.

- 1) Place your flat-panel screen-side down on a soft, flat surface.
- 2) Identify the number and location of the thread inserts on the back of your flat-panel.
- 3) Aligning the holes on each mounting bracket with the thread inserts on the back of your flat-panel.
- Secure each mounting bracket to your flat-panel by inserting a minimum of two (2) screws per bracket.


Do not overtighten the mounting hardware.

Make sure the directional arrows on the mounting brackets are facing up.

Proceed to the "Mounting the Flat-Panel" below.

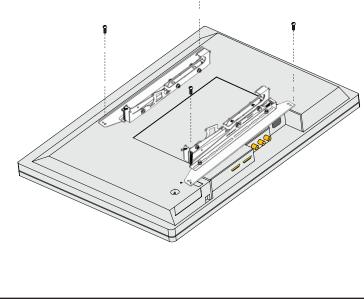

Mounting the Flat-Panel

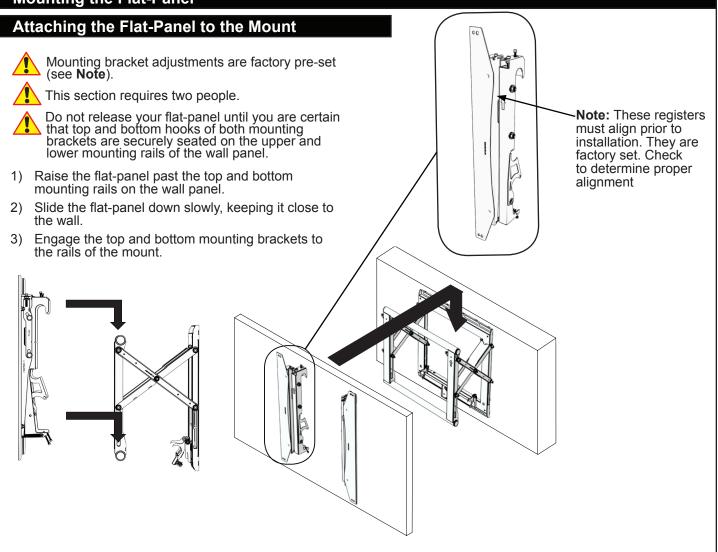





<u>/!</u>`

The locking safety screws keep the flat-panel from being accidently dislodged from the LMVP.


- Locate the pre-installed security locking safety screw at the bottom of each of the mounting brackets.
- 2) Use the Allen key (supplied) to tighten the locking safety screw.




Proceed to the "Post-Installation Adjustments" below.

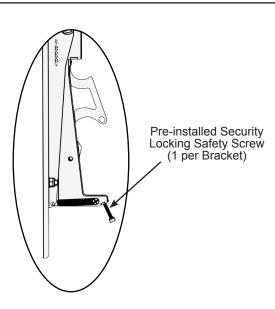

Post-Installation Adjustments The LMVP has a set of post-installation adjustments on each mounting bracket (Figure 1). See Note Use Allen key (supplied) to fine-tune adjust. LEVEL \bigcirc See Note Make sure the locking safety screws are loosened before making adjustments. (:0 \bigcirc Note: Screws have a limited travel adjustment. ουτ TILT Do not overtighten or over adjust the screw to avoid damage to threaded holes. Figure 1 See Note Move Inward Left Control **Right Control** Move Outward Left Control **Right Control**

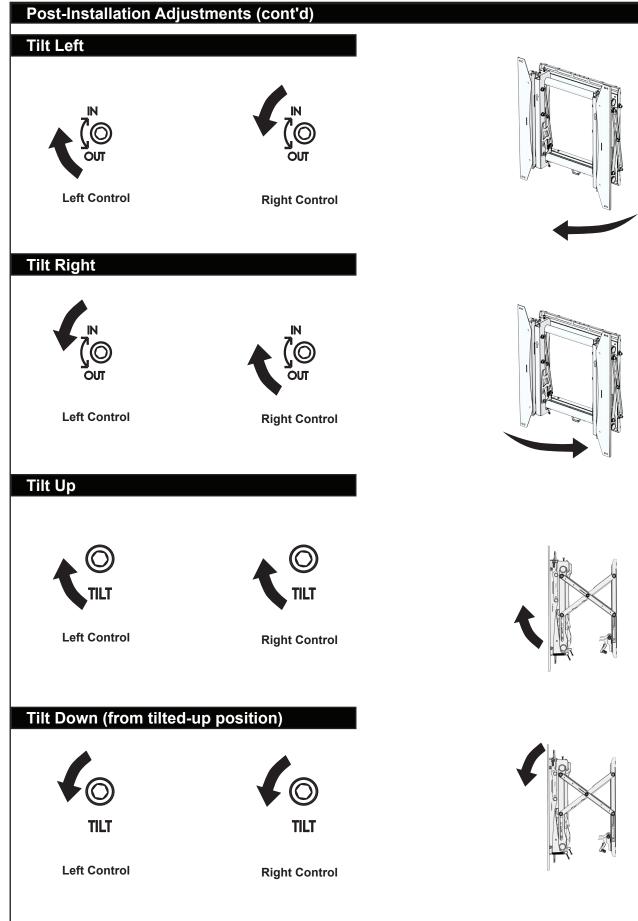

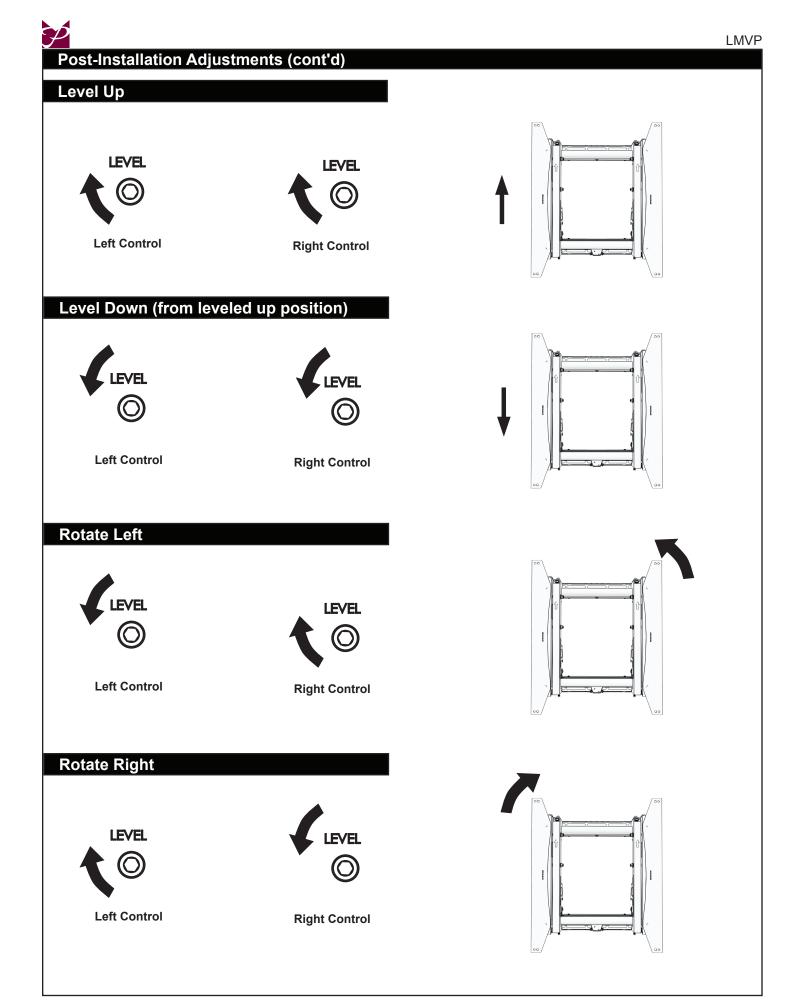


LMVP

Maintenance and Servicing


- 1) Push evenly in the front of the LMVP to release the single latch spring lock(Figure 1).
- Slowly pull the front of the LMVP to extend the scissor arms (Figure 2). 2)
- Loosen the locking safety screws on both mounting 3) brackets.
- Tilt up the bottom of the flat-panel, then set their kickstands against the bottom tubing of the mount (Figures 2 & 3). 4)

You can now reach behind the flat-panel for maintenance and servicing or replacement. After servicing, make sure the spring lock is locked again in the mount's closed position.

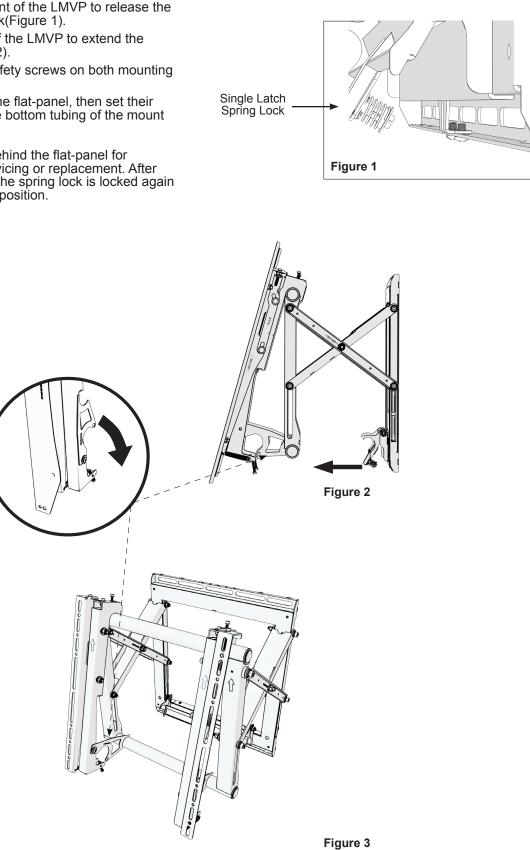

Technical Specifications

All measurements are in inches [millimeters].

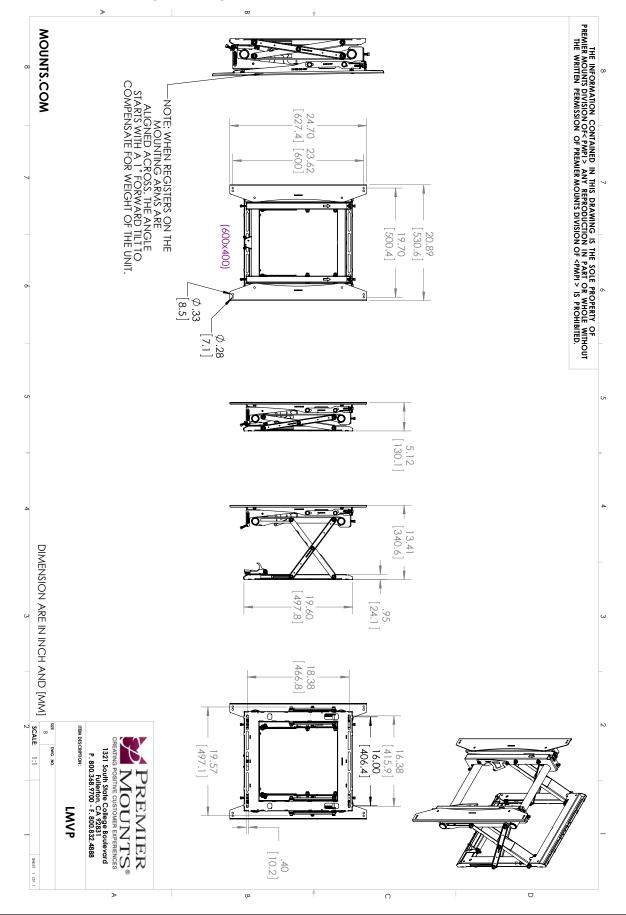

PREMIER MOUNTS LIMITED LIFETIME WARRANTY

What and Who is Covered by this Limited Warranty and for How Long

Premier Mounts warrants this product to be free from defects in material and workmanship for the lifetime of the original owner of this product. The limited warranty is valid only for the original purchaser of the product.

What Premier Mounts Will Do

At the sole option of Premier Mounts, Premier Mounts will repair or replace any product or product part that is defective. If Premier Mounts chooses to replace a defective product or part, a replacement product or part will be shipped to you at no charge, but you must pay any labor costs.

What is Not Covered; Limitations

PREMIER MOUNTS DISCLAIMS ANY LIABILITY FOR DAMAGE TO MOUNTS, ADAPTERS, DISPLAYS, PROJECTORS, OTHER PROPERTY, OR PERSONAL INJURY RESULTING, IN WHOLE OR IN PART, FROM IMPROPER INSTALLATION, MODIFICATION, USE OR MISUSE OF ITS PRODUCTS.

PREMIER MOUNTS DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. PREMIER MOUNTS IS NOT RESPONSIBLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING BUT NOT LIMITED TO, INABILITY TO USE ITS PRODUCTS OR LABOR COSTS FOR REMOVING AND REPLACING DEFECTIVE PRODUCTS OR PARTS. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

What Customers Must Do for Limited Warranty Service

If you discover a problem that you think may be covered by the warranty you MUST REPORT it in writing to the address below within thirty (30) days. Proof of purchase (an original sales receipt) from the original consumer purchaser must accompany all warranty claims. Warranty claims must also include a description of the problem, the purchaser's name, address, and telephone number. General inquiries can be addressed to Premier Mounts Customer Service at 1-800-368-9700. Warranty claims will not be accepted over the phone or by fax.

Premier Mounts Attn: Warranty Claim 1321 S. State College Blvd. Fullerton, CA 92831



205 Westwood Ave, Long Branch, NJ 07740 Phone: 866-94 BOARDS (26273) / (732)-222-1511 Fax: (732)-222-7088 | E-mail: sales@touchboards.com

How State Law Applies

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

Disclaimer

Premier Mounts intends to make this manual accurate and complete. However, Premier Mounts makes no claim that the information contained herein covers all details, conditions or variations, nor does it provide for every possible contingency in connection with the installation or use of this product. The information contained in this document is subject to change without notice or obligation of any kind. Premier Mounts makes no representation of warranty, expressed or implied, regarding the information contained herein. Premier Mounts assumes no responsibility for accuracy, completeness or sufficiency of the information contained in this document.

Contact Us

WORLD HEADQUARTERS

1321 S. State College Blvd Anaheim, CA 92831 USA <u>USA and Canada</u> Phone: 1-800-368-9700 Fax: 1-800-832-4888 <u>Other Locations</u> Phone: (001) 714-632-7100 Fax: (001) 714-632-1044

©Premier Mounts 2011

Installation Instructions